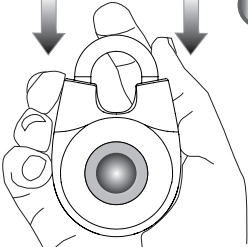
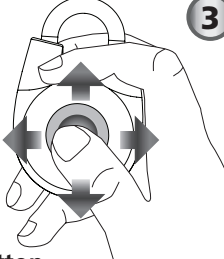
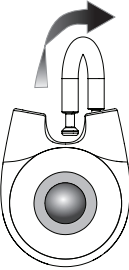


## Knollan's Saly<sup>TM</sup> Dance Operating Instructions

### HOW TO OPEN THE LOCK:

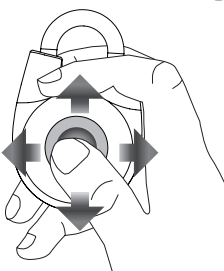
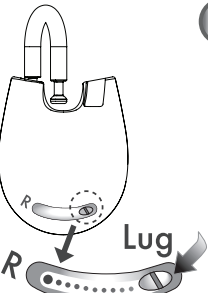
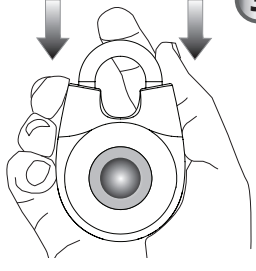
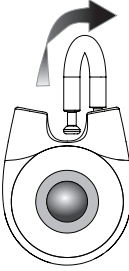
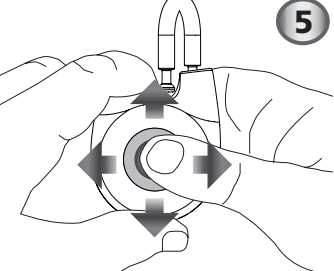
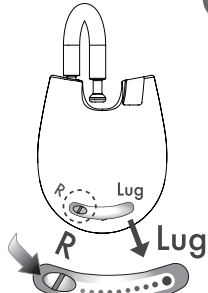
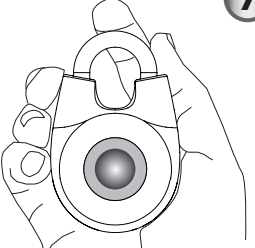
You may find the instructions' video in **English:**  
<http://www.youtube.com/watch?v=bfaYqiLGnYQ>

You may find the instructions' video in **German:**  
[http://www.youtube.com/watch?v=dMsU\\_1WN5qo&feature=related](http://www.youtube.com/watch?v=dMsU_1WN5qo&feature=related)

<p><b>1</b></p> <p>Look at the Factory Password (A note behind the barcode)</p>	<p><b>2</b></p>  <p>Squeeze the shackle twice toward the lock</p>	<p><b>3</b></p> <p>Enter the factory Password by moving the button in the directions of the arrows, <b>guiding the button back to the center position before moving to the next position.</b></p> 	<p><b>4</b></p>  <p>Open the lock</p>
---	--	--	--

### HOW TO CHANGE THE PASSWORD:

The Knollan's Saly<sup>TM</sup> lock lets you to choose a Password of any length. This allows you to choose any of your already-in-use code (internet-passwords, etc.) as your new Password.  
For example: SALY90 reads Down, Up, Right, Left, Left, Left

<p><b>1</b></p>  <p>Open the lock.</p>	<p><b>2</b></p>  <p>On the back, use a pointed object to slide the lug to the "R" position.</p>	<p><b>3</b></p>  <p><b>Close the lock and squeeze-in the shackle twice</b></p>	<p><b>4</b></p>  <p>Pull the shackle out</p>
<p><b>5</b></p>  <p>Enter your new Password. <b>Be sure to slide the button all the way in each direction, guiding the button back to the center position before moving to the next position.</b></p>	<p><b>Before(!) moving to step 6:</b></p> <p>If you made a mistake, or wish to make any changes to your Password, you can turn at any time to <b>step 3.</b></p>	<p><b>6</b></p>  <p>Slide the lug back to its original position.</p>	<p><b>7</b></p>  <p><b>Your new Password has been stored.</b></p>